

# CINEMA

## Adjustable Mount Assembly and Setup

Thank you for choosing the Cinema Adjustable Mount. The Adjustable Mount enables you to easily direct the center channel sound to your listening position. It may be used to position your Cinema on the floor or to mount it on a wall or ceiling.

The Adjustable Mount consists of a metal stand and two metal shelf brackets which you attach to the underside of your Cinema. You then adjust the angle of the Cinema by loosening the two aluminum knobs, rotating the Cinema to the desired position, and tightening the knobs to secure the Cinema.

Follow the steps below to assemble your Cinema Adjustable Mount.

When you unpack the Adjustable Mount and Accessory Kit, you should find:

### Assembly accessories

- 1 Cinema Stand
- 2 Metal Shelf Brackets
- 2 Large knobs
- 1  $\frac{5}{32}$  in. Allen wrench
- 6  $\frac{5}{8}$  in. button head allen bolts
- 2  $\frac{5}{8}$  in. fiber washers
- 2 Rubber washers
- 4 Rubber feet (stand use only)
- 2  $\frac{3}{4}$  in. carriage bolt

### Wall Mount Accessories

- 6 1 $\frac{1}{4}$  in. phillips head screws
- 6 Wall anchors

### Tools required for wall mount (not supplied)

- A 2 ft. level or a 2 ft. board and small level
- An electric drill and #2 phillips bit.

## Assembling the Adjustable Mount for use as a stand

**NOTE:** The following instructions are for stand use only. If you will be mounting the Cinema to your wall or ceiling, please see "Ceiling and Wall Installation".

1. Unpack and disassemble the two Metal Shelf Brackets from the Cinema Stand by unscrewing the large knobs (see figure A).
2. Position the Metal Shelf Brackets and Cinema Stand (see figure B).  
**NOTE:** After disassembling the Metal Shelf Brackets must switch sides to be properly oriented.
3. Place a carriage bolt through a Metal Shelf Bracket so that it points inward toward the center of the stand. Place the rubber washer between the Shelf Bracket and the Stand, push the bolt through the stand, place a plastic washer over the bolt and thread onto the large knob. Hand tighten and repeat each step for the other side (see figure B).
4. Flip the Cinema upside down, being careful to protect the tweeter and cabinet. Use the two cardboard inserts as supports under each side of the Cinema if necessary.

5. Remove the 2 protective foam pads from the bottom of each of the woofer boxes if they are attached to the Cinema. Failure to remove the foam pads may result in damage to the speaker cabinet.
6. Flip the Cinema Stand Assembly upside down and line up the holes on the Metal Shelf Brackets with the threaded inserts on the Cinema (see figure C).
7. By hand, thread the  $\frac{5}{8}$  in. bolts into the front two threaded inserts that are nearest the woofers. Then, thread in the remaining bolts and tighten each one with the  $\frac{5}{32}$  in. Allen wrench.
8. Insert the 4 rubber feet into the 4 outer holes located in the bottom of the stand. Moisten the rubber feet slightly before inserting, and twist into the hole with firm pressure (see figure B).
9. Flip the Cinema over and then place it in the desired position. Make certain it is stable, secure, and protected from being bumped.
10. Hold the front of the Cinema with one hand while loosening the knobs to prevent it from dropping suddenly. Slightly loosen each knob, alternating between them, until the Cinema begins to turn freely in the bracket. Now direct the speaker at the desired listening position and securely tighten each knob to prevent the Cinema from turning freely.
11. Attach the speaker cable and AC cord. Enjoy!

## Ceiling and Wall Installation

**NOTE:** These instructions are for mounting the Cinema on the wall or ceiling. If you will be using the Adjustable Mount as a stand on the floor, table or on the top of your television please follow the previous instructions.

**NOTE:** The following instructions assume the mounting surface is of wood frame and standard sheetrock construction. If you wish to mount the Cinema to another type of material or construction, you should consult a bonded contractor.

**NOTE:** MartinLogan recommends the use of 6 wall anchors to secure the Cinema to the wall. Most installations will use the outer 4 holes and two center holes. The outer two sets of holes are 16 in. on center. If any of the sets of holes hits a stud, it is recommended to directly screw into the stud.



**WARNING!** This operation requires two people, please do not attempt to install your Cinema on a wall or ceiling by yourself

In the following steps you will use 6 Wall Anchors and 6-1 $\frac{1}{4}$  in. phillips head screws to mount the Cinema Stand to the desired wall or ceiling. To accomplish this, you will use the 2 center holes and the 4 outside holes in the adjustable mount (see figure D). Using 6- $\frac{3}{4}$  in. button head Allen screws, you will then mount the Cinema speaker to the Metal Shelf brackets.

1. Locate and mark the center point where you would like to position the Cinema Adjustable Mount. Measure 17 inches horizontally in each direction from the center point. This area must be clear of any obstructions in order to mount the Cinema. Also, make certain there will be at least 6 inches of clearance above or below in order to install the knobs and tilt the speaker up or down.
2. Using a #2 phillips bit and an electric drill, drive a wall anchor into the wall on the center point.
3. Unscrew the two large knobs and remove the two Metal Shelf Brackets from the Cinema Stand. Set the 2 rubber washers, the 2 plastic washers and the large knobs aside for use in a later step.
4. Place the Cinema Stand carefully against the wall and align its uppermost center hole over the wall anchor. Using one of the 1/4" in. phillips head screws, mount the Cinema Stand to the wall. Do not fully tighten the screw as you must first level the stand before marking the remaining holes.
5. Place a level across the top edge of the Cinema Stand and make sure that it is level. Then, consult the illustration and mark the wall through the center of each of 5 holes in the Cinema Stand.
6. Remove the Cinema Stand and drive a wall anchor at each of the 5 marks.
7. With the help of an assistant, place the bracket against the wall and attach it to the wall anchors using the (6) 1/4 in. phillips head screws. Tighten the screws but be very careful not to over tighten them and strip out the wall anchors.
8. Attach the Metal Shelf Brackets to the Cinema Stand. Place a carriage bolt through a Metal Shelf Bracket so that it points inward toward the center of the stand. Place the rubber washer between the Metal Shelf Bracket and the stand, push the bolt through the stand, place a plastic washer over the bolt and thread on to the large knob. Hand tighten and repeat each step for the other side. Make certain the Metal Shelf Brackets are parallel to the floor and tighten each large knob.
9. Remove the 2 protective foam pads from the bottom of each of the woofer boxes if they are attached to the Cinema. Failure to remove the foam pads may result in damage to the speaker cabinet.
10. Set the Cinema on the Metal Shelf Brackets. By hand, thread the 3/4 in. button head Allen screws into the front two threaded inserts that are closest to the woofers. Next, thread in the 4 remaining screws. Tighten each screw with the 5/32 Allen wrench.

11. To direct the speaker to the desired listening position, while supporting the Cinema with one hand, slightly loosen the large knobs with the other. Tilt the Cinema to its best advantage and securely tighten each knob.

12. Attach the speaker cable and AC power cord. Enjoy!

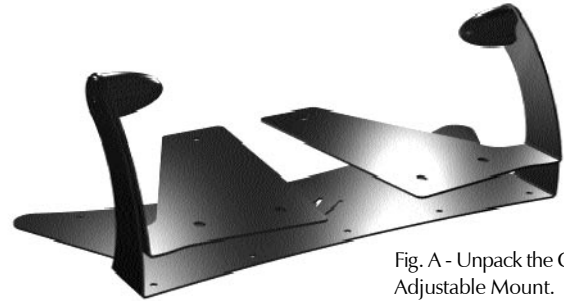


Fig. A - Unpack the Cinema Adjustable Mount.

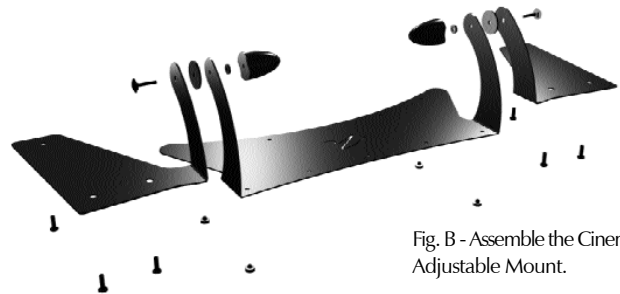


Fig. B - Assemble the Cinema Adjustable Mount.

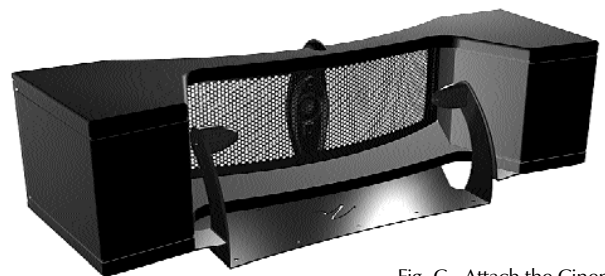


Fig. C - Attach the Cinema Adjustable Mount to the Cinema.

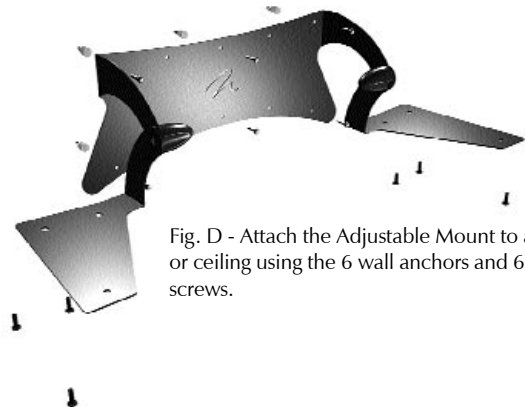


Fig. D - Attach the Adjustable Mount to a wall or ceiling using the 6 wall anchors and 6 Allen screws.

c l s e l e c t r o s t a t i c



**MARTIN LOGAN**

2101 Delaware Street, Lawrence, Kansas 66046, USA tel 785.749.0133 fax 785.749.5320 www.martinlogan.com

©2000 MartinLogan, All rights reserved